

INSTALLATION INSTRUCTIONS


HONEYCOMB SHADES

Cordless Lift System
Continuous Loop Control System
Motorization

Thank you for your purchase. This shade has been custom built for you from the highest quality materials.
To avoid errors and save valuable time, please read these instructions before installing your new shades

TOOLS YOU WILL NEED

1. Pencil or Marker
2. Measuring Tape
3. Phillips Screwdriver
4. Carpenter's Level
5. Power Drill
6. Mounting Fasteners
7. 3/32" Drill Bit & 1/4" Hex Nut Driver Bit

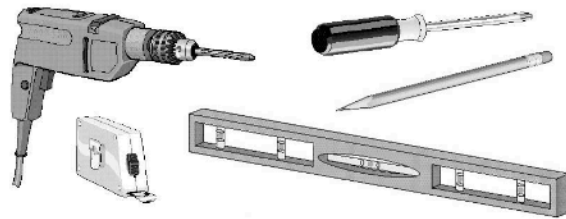




Mounting Surface	Fastener
Drywall, Plaster	Wall Anchors, Expansion Bolts (Not provided) 
Metal	Sheet Metal Screws (Not provided) 
Wood	No. 6 Hex Head Screws (Provided) 


TABLE OF CONTENTS

Getting Started	Page 2
Mounting Type	Page 2
Bracket Installation	Page 2
Motorized Shades	Page 3
Inside Mount	Page 3
Outside Mount	Page 3
Installing the Shade	Page 4
Installing the Cord Tensioner	Page 4
Attaching Hold-Down Brackets (optional)	Page 4
Operating the Shade	Page 5
Adjusting the Shade	Page 5
Troubleshooting	Page 6
Care and Cleaning	Page 6
Child Safety	Page 7
Warranty Information	Page 7


GETTING STARTED

Thank you for purchasing this Honeycomb Shade. All of the required installation components are wrapped in your package along with these instructions. With proper installation, operation, and care, your new shades will provide years of beauty and performance. Please thoroughly review this instruction booklet before beginning the installation. Check that the parts you have correspond to the parts shown below.


Note: Some parts may vary depending upon your chosen shade system or mounting option.

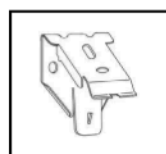


Installation Brackets

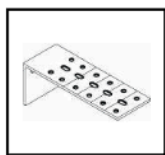

Extension Bracket
(optional)

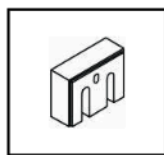

Spacer Blocks
(optional)

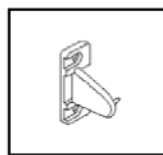

Hold Down Brackets
(optional)




Cord Tensioner Bracket & Instruction Pack
(Cord Loop Shades Only)

Cordless Lift Shade Only




Clear Plastic Insert
— if ordered

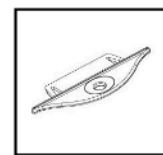

Cordless Lift Handle
(Clear or Color Coordinated)

Mounting Types

If the installation brackets are mounted correctly, the rest of the installation process will follow easily. To prepare for this important first step, review the mounting types and basic window terminology illustrated below.

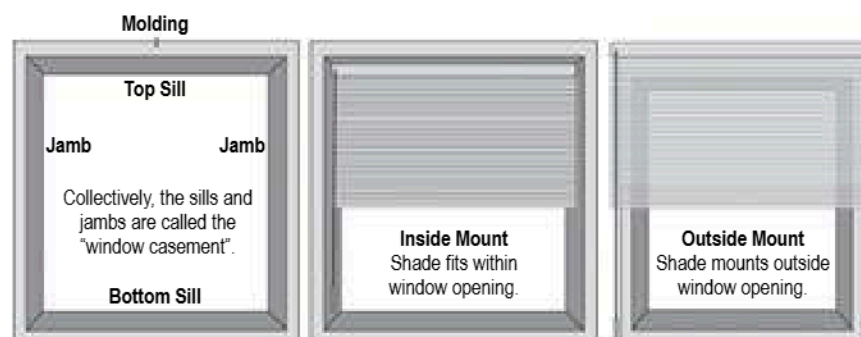

Bracket Installation

The installation brackets may be for **INSIDE** or **OUTSIDE** mounts.

Mounting the brackets level is essential for proper operation of the shade.

Shim the brackets if necessary to achieve a level alignment.

The bracket requirements and placements are the same for inside and outside mounts.

Refer to the following spacing diagram and bracket requirement chart.

Shade Width	Brackets Required
18" to 38"	2
38-1/8" to 72"	3
72-1/8" to 106"	4
106-1/8" to 140"	5
140-1/8" to 174"	6

When installing motorized shades with an external battery pack refer to the chart below:

External Battery - Mounted away from the Headrail

Honeycomb & Hybrid Pleat

Inside (IB) Mount	
Minimum mounting depth	3/4"
Minimum mounting depth, flush mount	2-1/8"
Outside (OB) Mount	
Minimum flat vertical surface	1-1/2"

External Battery - Mounted to the back from the Headrail*

Honeycomb & Hybrid Pleat

Inside (OB) Mount	
Minimum mounting depth	2-5/8"
Minimum mounting depth, flush mount	3-1/4"
Outside (OB) Mount	
Minimum flat vertical surface	1-1/2"

NOTE: Extension Brackets required for External Battery - Mounted to the back of the headrail.

Motorized Shades

Prior to installing the shade, pair the motor with the remote using the instructions included with the remote.

Inside Mount

For inside mounts the installation brackets will be screwed in place through the top two holes of each bracket. Refer to the mounting depth chart:


Minimum Depth	Fully Recessed
3/4"	2-1/8"

NOTE: Prior to mounting the brackets, add any clearance depth required to avoid obstructions such as window cranks or handles.

ATTACH THE BRACKETS:

1. Screw installation brackets through top two holes to desired window sill location.
 - Use a 3/32" drill bit to drill holes for the screws.
2. Ensure all brackets are level and aligned.

IMPORTANT: If you are fastening the installation brackets to drywall, be sure to use wall anchors and follow the instructions provided with the anchors. (Anchors not provided.)

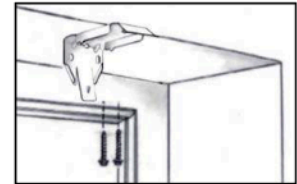

Outside Mount


For outside mounts the standard installation brackets will be screwed in place through the two back holes of each bracket. Refer to the minimum surface height chart:

Minimum Height
1-1/2"

ATTACH THE BRACKETS:

1. Screw standard brackets through two back holes to desired location.
 - Use a 3/32" drill bit to drill holes for the screws.
2. Ensure all brackets are level and aligned.


IMPORTANT: If you are fastening the installation brackets to drywall, be sure to use wall anchors and follow the instructions provided with the anchors. (Anchors not provided.)

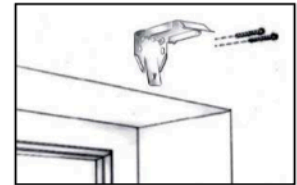

EXTENSION BRACKETS (optional):


1. Position the extension brackets to the desired wall location.
2. The bracket tops must be aligned and level to one another.
3. Mount the extension brackets through the back holes with two screws.
4. Attach installation brackets to extension brackets with included screws & nuts.

NOTE: Use the same holes for all brackets to ensure even projection from the surface.

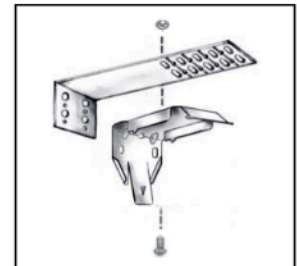

SIDE MOUNT WITH EXTENSION BRACKETS (optional):

1. Measure from window sill up to desired mounting position on each side of the window frame.
2. Mark position.
3. Mount Extension Brackets on each side of window frame, as shown. Make sure to confirm that the headrail will sit perfectly level.
4. Once the Extension Brackets are installed and properly positioned, attach the mounting brackets using the nuts and bolts provided.

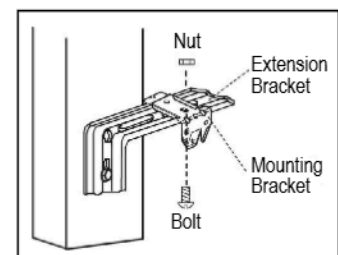

Installing the Shade

FOR MOTORIZED SHADES (ONLY)

 
IMPORTANT: For Motorized shades only, make sure the remote control is paired to the motor prior to installing in the window.

FOR CORDLESS LIFT SHADES (ONLY)

NOTE: The cordless lift handle should be installed prior to mounting the shade in the window.


- The shade will come with the color coordinated textured handle pre-inserted into the moving rail(s).
- If desired, a clear textured handle or a clear plastic insert are available and must be selected at the time the order is placed.

NOTE: The plastic handle is not easily removable. Should it become necessary to remove the handle please contact customer service.



MOUNTING THE HEADRAIL

- With the front side of the shade facing you, tilt the headrail slightly backward to angle the front inside lip to the brackets.
- Rotate headrail back and upward to snap it into place.

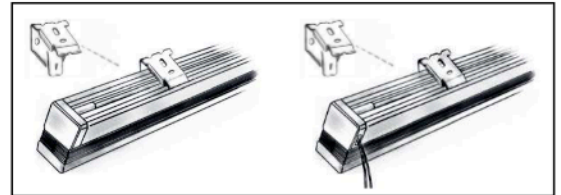

Installing the Cord Tensioner

FOR CONTINUOUS CORD LOOP SHADES (ONLY)


Review and follow the instructions included with the cord tensioner installation kit.

These instructions must be followed to correctly install and secure the cord tensioner.



Attaching Hold-Down Brackets (optional)

1. Lower the shade and place the hold down pins into the bottom rail end caps.
2. Mark the hold down bracket locations on the mounting surface.
3. With the brackets level, attach them using two screws.

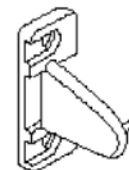

Operating the Shade

CONTINUOUS CORD LOOP SHADES

TO RAISE AND LOWER THE SHADE:

1. Pull down on the cord loop to raise and lower.
2. One side of the loop will raise the shade and one side will lower it.
3. If the same cord is continuously pulled after lowering, the shade will begin to rise.

NOTE: *Don't raise shade any higher than it was intended to go. If shade doesn't raise evenly, in most cases lowering it completely will allow cords to re-align on the spool.*

CAUTION: *The shade will not operate properly unless the cord tensioner is secured. A cord tensioner installation kit has been included with your shade.*

CORDLESS LIFT SHADES

TO RAISE AND LOWER THE SHADE:



1. Hold the handle in the center portion of the bottomrail to ensure level movement.
2. Shades over 42" in width will have 2 handles evenly positioned within hands reach along the center portion of the bottomrail to ensure level movement.
3. Lower the shade by gently pulling downward to the desired position.
4. Raise the shade by gently pushing upward to the desired position

Adjusting the Shade


- Raise and lower the shade several times.
- If the length is incorrect or the bottom rail is not level, use the following steps to correct.

BOTTOMRAIL SHADE ADJUSTMENT

1. Lift bottomrail on the side to be adjusted. This will take the weight off the cord.
2. Use a screwdriver or dime.
 - Turn screw clockwise to lift that side of the shade.
 - Turn screw counter clockwise to lower that side of the shade.
 - Half a revolution is 1/4" adjustment (maximum adjustment is 1/2").

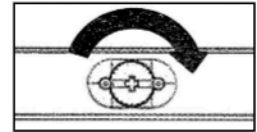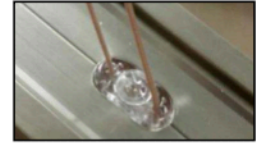

Lift Shade Side

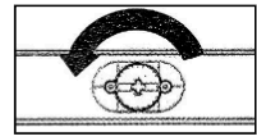

Lower Shade Side

INTERMEDIATE RAIL SHADE ADJUSTMENT

TOP-DOWN / BOTTOM-UP OR TRILIGHT SHADES



The intermediate rail is adjusted using the exposed skew adjuster visible between the cords.

For Trilight Shades, there is a small gap in the fabric to allow access to the skew adjuster.

1. Lift intermediate rail on side to be adjusted. This will take the weight off the cord.
2. Use a screwdriver or dime.
 - Turn screw clockwise to lift that side of the rail.
 - Turn screw counterclockwise to lower that side of the rail.
 - Half a revolution is 1/4" adjustment (maximum adjustment is 1/2").

TWO FABRIC COMBINATION SHADES

The intermediate rail is adjusted using the skew adjusters that can be found on either side of the rail.

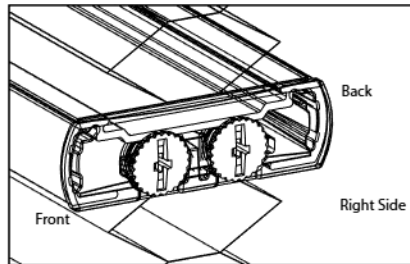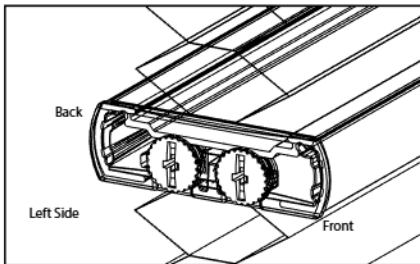

1. Lift intermediate rail on side to be adjusted. This will take the weight off the cord.
2. Use a screwdriver or dime.
 - Turn screw clockwise to lift that side of the rail.
 - Turn screw counterclockwise to lower that side of the rail.
 - Half a revolution is 1/4" adjustment (maximum adjustment is 1/2").
3. The intermediate rail should be adjusted as follows:
 - Two Cords: Turn front skew adjusters on either the left or right end.
 - Three Cords: Turn both front and back skew adjusters on the left end, and the front skew adjuster on the right end.
NOTE: If the front left skew adjuster is used to take up or let down the middle rail, the back skew adjuster should be turned in a similar manner to take up any slack in the middle cord.
 - Four Cords: Turn both front and back skew adjusters on both the left and right ends.
NOTE: Once leveled using the front skew adjusters, the back skew adjusters on both sides should be turned to take up the slack in the middle cords.

TROUBLESHOOTING

THE SHADE WILL NOT SNAP INTO THE INSTALLATION BRACKETS.

- Check that the installation brackets are aligned and level.

THE SHADE IS HARD TO RAISE OR LOWER, OR WILL NOT RAISE OR LOWER.

- Shades cannot be forced into tight inside mount window openings. If an inside mount, check that the shade is installed correctly. Make sure there is clearance between the ends of the shade and the window casement.
- Check that the installation brackets are level. Shim to level, if necessary.
- If hold-down brackets are used, make sure they have been released.
- Make sure the fabric is not caught.

THE SHADE RAISES OR LOWERS UNEVENLY OR THE BOTTOM RAIL IS UNEVEN.

- Check that the window is square by measuring the diagonals.
- Check that the installation brackets are level. Shim to level, if necessary.
- Adjust the cords under the bottom rail (see “Adjusting The Shade” on page 6).

THE CORD TENSIONER GRABS ONTO THE CORD UPON OPERATION.

- Check that the cord tensioner is mounted properly. Reinstall, if necessary. Refer to the Universal Cord Tensioner Installation Instructions included with your cord loop shade.

IMPORTANT INFORMATION REGARDING CORDLESS SHADE OPERATION.

- Daily operation of shade will ensure that it performs at its optimal level.
- If the shade is in the lowered position for an extended period of time, extra care needs to be taken when raising the shade. The fabric will relax and may resist lifting. This is a natural occurrence with all fabric shades. When lifting, you may notice the billowing (falling out) toward you. This is temporary and can be corrected by slowly raising the shade completely and then operating several times. This allows the fabric to go back to its pleated state, and the shade will operate as designed.
- If shade has been in the fully raised position for an extended period of time, it may have a tendency to “spring back” above the desired length of the shade. This is temporary and can be corrected by completely raising the shade and operating several times.
- Operating the shade with the handle(s) provided is recommended so that the shade is balanced when raising and lowering.
- Motorized Shades – see Operating Instructions Guide included with shade/remote control.

CARE AND CLEANING

Honeycomb shades are made of an anti-static, dust resistant fabric which repels dirt and dust. For most of these fabrics, the following options are available if your shade needs cleaning.

DUSTING: Regular light dusting with a feather duster is all the cleaning that is needed in most circumstances.

VACUUMING: Use a hand-held vacuum with low suction for more thorough dust removal.

SPOT CLEANING: Use the following steps for spot cleaning: (1) Prepare a solution of warm water and mild dish-washing detergent. (2) Dampen a clean cloth in the solution and ring it out. (3) Dab the spot with the dampened cloth until it is gone. **DO NOT RUB THE FABRIC.** (4) Allow the shade to dry in the completely lowered position.

CAUTION: *Avoid creasing Blackout fabrics during cleaning.*

DEEP CLEANING: Use the following steps for deep cleaning: (1) Immerse shade in basin or bathtub filled with warm water and mild detergent. (2) Rinse with clean water. (3) Fully raise shade and tilt to eliminate excess water, (4) Reinstall damp shade, lower it, and let it dry completely.

CAUTION: *Do not immerse Blackout fabrics. Do not immerse the headrail or any fabric-wrapped rail.*

ULTRASONIC CLEANING: Standard shades, except those made with Blackout Lining can be ultrasonically cleaned by a professional.

- Specify that a mild detergent be used.
- Never immerse the headrail or any fabric-wrapped rail in the solution.
- Dry the shade completely in the lowered position.

CAUTION: *Do not ultrasonically clean Blackout fabrics. Do not immerse headrail.*

CHILD SAFETY

Young children can **STRANGLE** in cord loops and in the loop above the cord stop. They can also wrap cords around their necks and **STRANGLE**.

- Always keep cords out of children's reach.
- Move cribs, playpens and other furniture away from cords.
Children can climb furniture to get to cords.
- Do not tie cords together.
- Make sure cords do not twist together and create a loop.

⚠ WARNING ⚠ ADVERTENCIA	
Window Blind Cord Strangulation Risk Window Blinds with a damaged or loose tension device or retractable cord that fails to fully retract pose a strangulation risk to children. To avoid this potential strangulation risk, consider purchasing cordless products or products with inaccessible cords.	
Riesgo de Estrangulamiento en Cuerdas de Persianas Las persianas con un dispositivo tensor suelto o dañado o con una cuerda retractable que no se ajusta completamente representan un riesgo de estrangulación para los niños. Para evitar un posible riesgo de estrangulamiento, considere comprar productos inalámbricos o productos con cuerdas inaccesibles.	

Cord Loop and Beaded Chain Loop Shades

- Attach the tensioner to the wall or window casement.
This can prevent children from pulling cord loops around their necks.
- A tensioner installation kit with instructions for attaching the tensioner is provided. For the shade to operate properly, the tensioner must be correctly mounted and secured. See tensioner instructions provided for details.
- Only the supplied tensioner(s) and hardware should be used.

SAFETY LABELS

In compliance with WCMA/ANSI safety standards the warning labels on the bottom rail are designed to be permanent. **DO NOT** remove the permanent warning label on the bottom rail. This assures that future owners of this product will be aware of potential dangers associated with this shade.

WARRANTY INFORMATION

Lifetime Limited Warranty covering our Custom Made Blinds

We extend this lifetime limited warranty to the original purchaser. This warranty applies only to manually operated Custom Products properly installed in the window, door or interior area for which they were intended. Installation of the product must be in accordance with accompanying instructions. The product cannot be modified. It is the purchaser's responsibility to maintain and clean the product in compliance with the instruction provided. The product must be used only in the window for which it was purchased. Damage to the product resulting from misuse, abuse, direct exposure to salty air or discoloration due to sunlight or the passage of time is not covered by this warranty.

This warranty does not apply to conditions caused by normal wear and tear upon the product. This warranty is exclusive and in lieu of all other obligations, liabilities or warranties. In no event shall the Manufacturer be liable for incidental or consequential damages or for any other direct or indirect damage, loss, cost, expense or fee. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this exclusion or limitation may not apply to you.

In the event of a defect under this warranty, we will repair or replace the product, at our option, provided it is returned to our store. Our warranty obligation excludes shipping charges and labor costs for measuring and installation. Repairs will be made with like or similar parts. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

Notes: Motorization Systems are warranted for five years from the date of purchase. Specialty Blinds and Shades are warranted for one year from the date of purchase.

This warranty does not apply to Commercial Orders.



1019982