
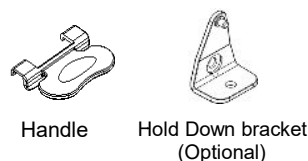


Installation Instructions

Honeycomb Shades

Cordless, Cordless TDBU, Cordless Day & Night

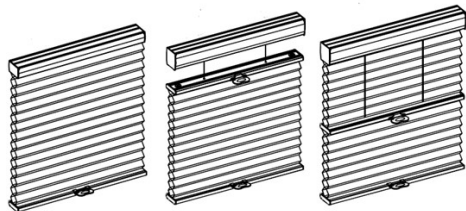


Hardware Standard Quantity

Order Width (X)	$X \leq 43"$	$43" < X \leq 72"$	$72" < X \leq 101"$	$X > 101"$
Installation Bracket	2	3	4	5
Handle	1pc for $X \leq 72"$, 2pcs for $X > 72"$ (Cordless) 2pcs for $X \leq 72"$, 4pcs for $X > 72"$ (Cordless TDBU & Day & Night)			
1 1/4" Screw for Installation Bracket	4	6	8	10
Hold Down Bracket (Optional)	2	2	2	2
Spacer Block (Optional)	1pc to extend distance 3/8" 2pcs to extend distance 1 1/16"			
2" Screw for Installation Bracket with Spacer Block (Optional)	4	6	8	10
3/4" Screw for Hold Down Bracket (Optional)	2	2	2	2


Note: Optional flat head screws included.
Use as needed.

Step 1: Bracket Installation

For shade width $> 20"$, measure 7" from both ends of the head rail. Mark the bracket location on the mounting surface.




For shade width $\leq 20"$, space each bracket evenly. Mark the bracket location on the mounting surface.





Inside Mount

• Use two 1 1/4" mounting screws to secure brackets. Use wall anchors for drywall or plaster wall.

Allocate a min. distance of 1/16" from wall to the front of brackets.




For 3/8" Single, 3/4" Single & 1/2" Double, 3/4" Double & 1 1/4" Single:
Cordless, Cordless TDBU, Cordless Day & Night

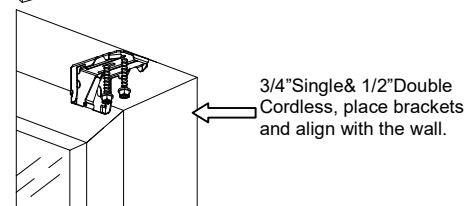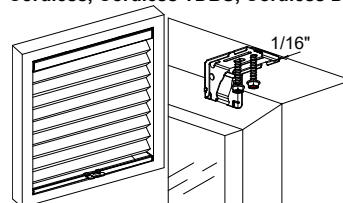


Outside Mount

• Use two #8 1 1/4" mounting screws to secure brackets. Use wall anchors for drywall or plaster wall.

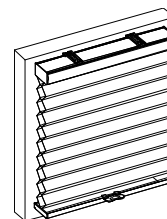


• For 3/8" Single, 9/16" Single, 3/4" Single & 1/2" Double, Cordless, Cordless TDBU, Cordless Day & Night

• Allocate a min. distance of 1/16" between the end of brackets and the top of window frame.

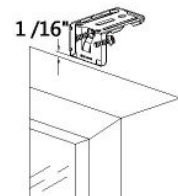


• For 3/4" Double & 1 1/4" Single, Cordless, Cordless TDBU, Cordless Day & Night

Allocate a min. distance of L2 between the end of the brackets and the top of the window frame. ($0 \leq L2 \leq 1/4"$)

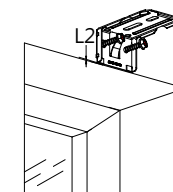

* For shallow mounting, use 1pc or 2pcs of flat head screw to secure the bracket as below.

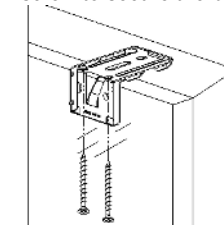


Step 2: Shade Installation

• Position headrail at an angle so that it is hooked to the front of the bracket. Then push it upward to snap into the brackets.

⚠ For proper installation, start by attaching the front of the rail to the bracket and ensure to stick right in place.


For easier installation, lower the middle rail of cordless TDBU away from the headrail before installing the headrail.

Note: You will hear a click sound once the head rail is properly secured.

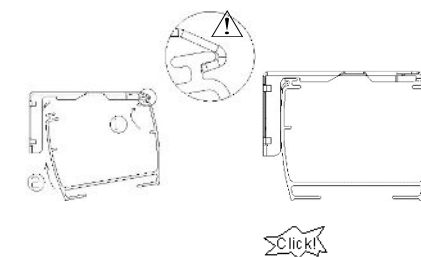

Step 3: How to Install Shade Handle

⚠ For order width $> 72"$, the distance between the 2 handles should be 48" as below.

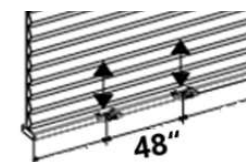

Getting Started

Remove shade from package. Save packaging until shade is installed and working to your satisfaction.

Tools:


- Level
- Measuring Tape
- Pencil
- Power drill (1/4" hex driver and drill bit)
- Screwdriver



You will need to use the following fasteners for your particular mounting surface.


Surface	Fastener
Wood	#8 1 1/4" Screws (Provided) #6 3/4" screws
Drywall/Plaster	Wall Anchors, Expansion Bolts (Not Provided)
Metal	Sheet Metal Screws (Not Provided)

Check Components/Hardware:

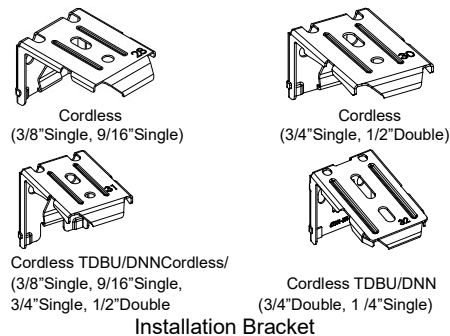


Middle Rail:

Position the handle at an angle so that it is hooked to the rib at the top of the bottom rail. Then push the handle downward to snap into place. You will hear a loud click sound once the handle is properly secured.

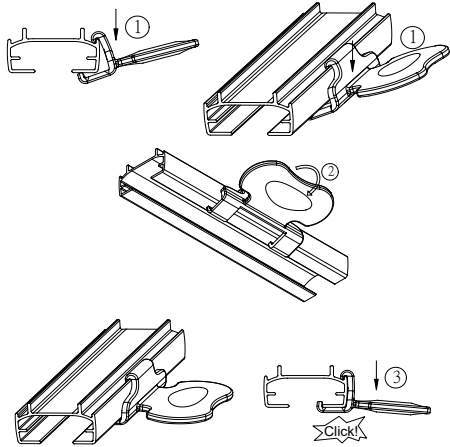

Bottom Rail:

Position the handle at angle so that it is hooked to the rib on the bottom of the bottom rail. Then push the handle upward to snap into place. You will hear a loud click sound once the handle is properly secured.

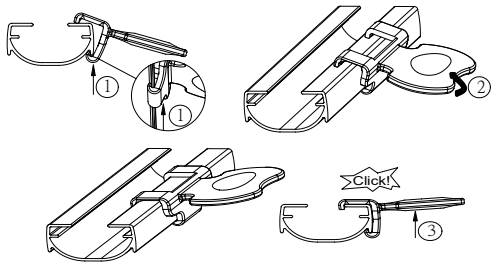


★ **Congratulations! You have finished installing the shade.**


How to Remove Shade Handle

Use a flat head screwdriver to remove both hooked parts. When the hooked parts are loosened, the handle will easily come off.


(To avoid scratching the rail with the screwdriver, please put a piece of adhesive tape on the head of the screwdriver before removing the handle from the rail.)




Middle Rail

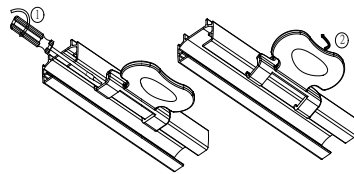

Bottom Rail

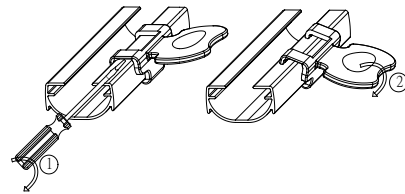

Shade Operation

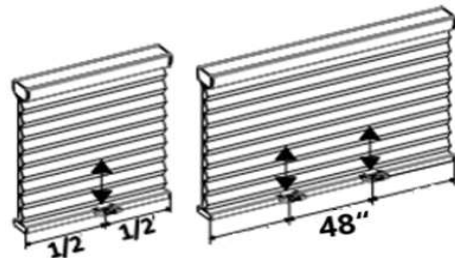

To lower the shade, gently pull down the shade by the bottom rail handle and stop at the desired location.

For TDBU & Day&Night, pull down the bottom rail first before lowering the middle rail.

To raise the shade, gently raise the shade by the bottom rail handle to desired height.


For TDBU & Day&Night, if the shade will not lift, first lower the middle rail completely to the bottom rail. Raise both up together.

⚠ Do not grasp the rail unevenly. Always lower or raise the shade in the middle or use even pressure with both hands to operate both handles on the rail.

How to Install Hold Down (optional)


A. For Hold Down Brackets.

Use #6 3/4" screw to secure each bracket. Please fasten the screw tightly.

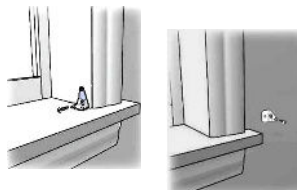

B. For Magnetic Hold Down


Use M3x15mm screw to secure the magnet catch at the below location. Make sure the magnet catch align with the pre-installed magnet on shade bottom rail.

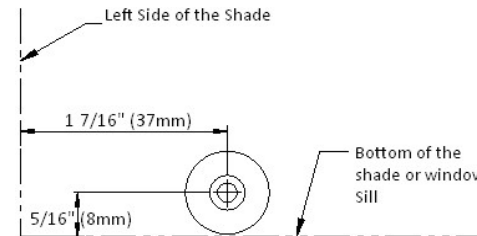

Remove the Shade

For Cordless, fully raise the shade.

For TDBU / Day & Night, Lower the middle rail. Gently pry the bracket off the head rail with a flat screwdriver as below picture. Remove the shade.

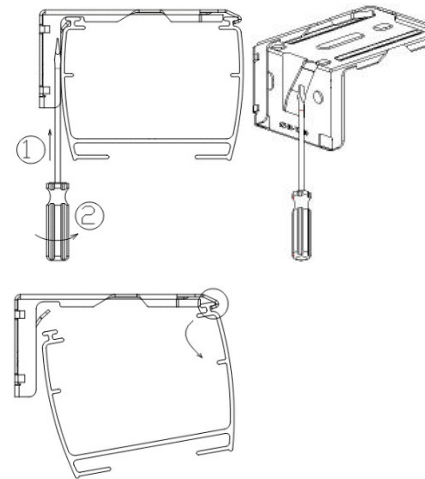


Cleaning the Shade

Routine cleaning will help maintain the beauty of your shade. The shade can be cleaned by using a soft brush, vacuumed with a low suction hand-held vacuum, cleaned ultrasonically (specify that a mild solution must be used and that the head rail should never be immersed in liquid). Spot cleaning is not recommended, but if necessary, dampen a clean cloth with a solution of warm water and mild detergent to dab the spot until it's gone (do not rub!).

Troubleshooting

Problem	Solution
The shade will not snap into the mounting brackets	Check if mounting brackets are aligned. Refer to below drawing.
The shade will not lift	Gently pull down on the bottom rail to reactivate the cordless mechanism. Repeat if necessary. For TDBU & Day&Night, pull the midrail down fully to the bottom first. Then raise the bottom rail and middle rail up together.
	Check if all brackets are locked in place. Refer to below drawing.
The shade stack up unevenly	Lower the shade completely. Then raise it up to correct it. Repeat if necessary.

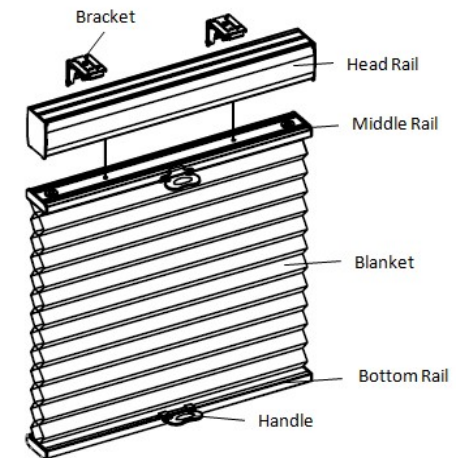

Some options listed may not be applicable.

Optional Parts Installation

Side Mount Bracket

Side mount bracket is only available for the arch window with shade width $\leq 37"$ and the normal bracket qty should be 2.



Hardware Standard Quantity


Shade Width (X)	$X \leq 37"$
Installation Bracket	2
1 1/4" Screw for Installation Bracket	4
Side Mount Supporting Bracket	2
M4 Nut & Bolt	4 sets ※

※2sets nuts & bolts for 3/8"S, 9/16"S, 3/4"S & 1/2"D Cordless


How to assemble side mount bracket

Align the side mount supporting bracket holes with the installation bracket holes, and then screw the M4 nut & bolt into the diagonal holes for the left side mount bracket. Do the same for the right side mount bracket.

For 3/8"S, 9/16"S, 3/4"S & 1/2"D Cordless,

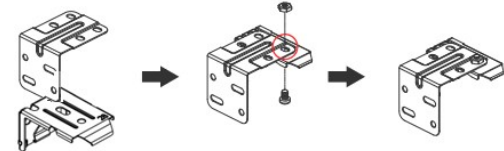


For 3/8"S, 9/16"S, 3/4"S, 1/2"D, 3/4"D & 1 1/4"S Cordless TDBU/ Cordless Day & Night/ 1 1/4"S & 3/4"D Cordless,

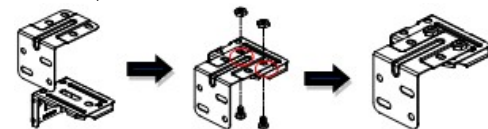



How to install side mount bracket

Put two 1 1/4" mounting screws into the diagonal holes to secure bracket. Use wall anchors for drywall or plaster wall.


For Cordless:

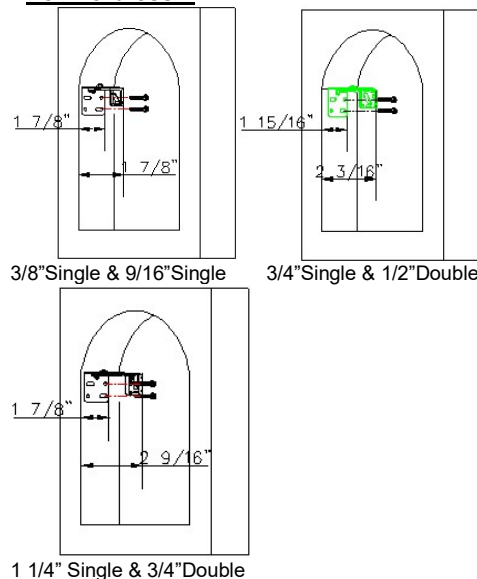

For Cordless TDBU, Cordless Day & Night:

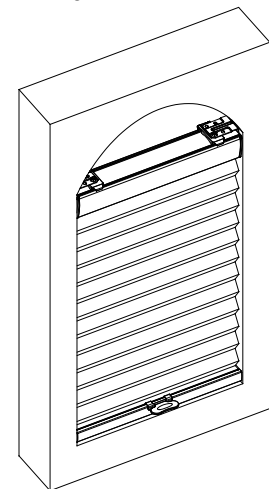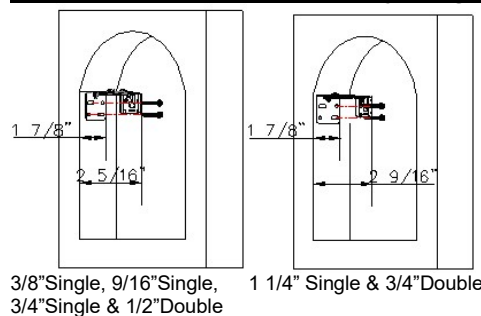

Light Guard

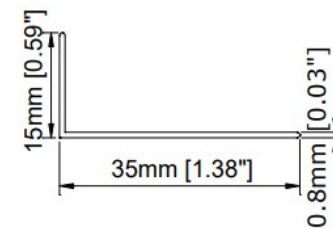

Light Guard



3/4" (M3.5x18.5mm) Flat Head Screw




Clear Plastic Tape (only for split light guard)

Install Light Guard (optional for IB)

Notice: To avoid scraping, leave at least 1/16" (2mm) gap between fabric stack and light guard.


The light guard is to be placed at back of the shade on left & right side.

- A. When the light guard length $\leq 96"$, place the light guard vertically towards the bottom window frame and then mark out the location with a pencil. Remove the double sided tapes and carefully paste the light guard in position. Fix 2pcs of 3/4" flat head screws to secure the light guard.


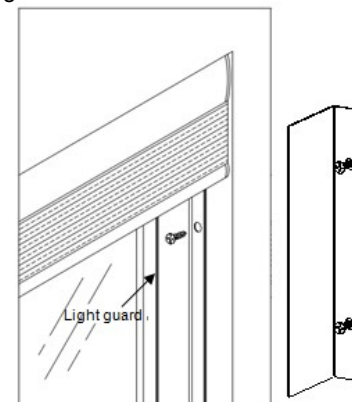


Note: The light guards on both sides are identical;

Use the double-sided tape on the narrow side of the light guard to attach to the window frame.

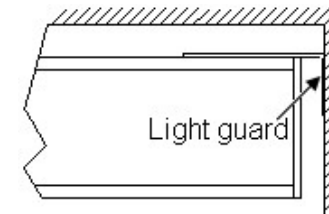

- B. When the light guard length exceeds 96", it will be spliced into 2pcs. Stick 2pcs of clear plastic tapes on both sides of the split part to seam the light guard. Place the light guard vertically towards the bottom window frame and then mark out the location with a pencil. Remove the double sided tapes and carefully paste the light guard in position. Fix 4pcs of 3/4" flat head screws to secure the light guard.

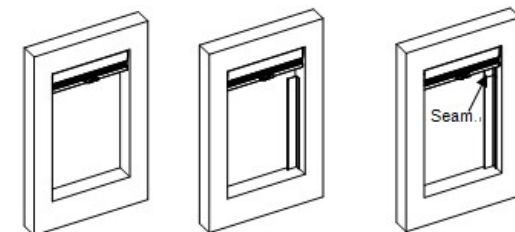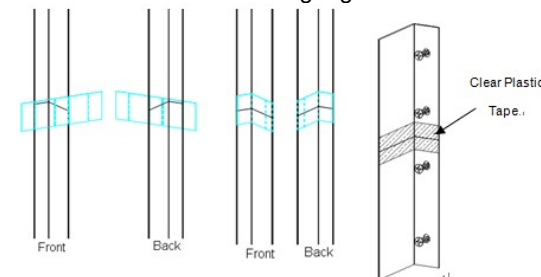

Note: We recommend that the seam be placed on top, shown in above drawings.