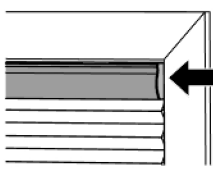
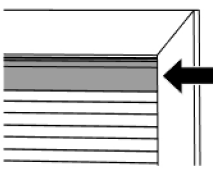


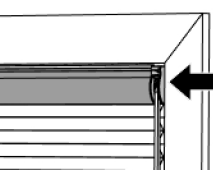
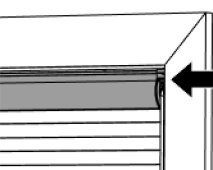
Control Type and Size Considerations

Depth Requirements for Inside Mount: Cordless Lift

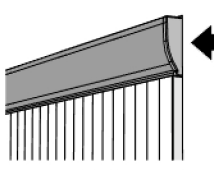
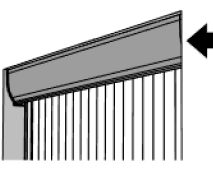
Shade Type	Cell Size	Cordless Lift Headrail Dimensions (inches)	 Partially recessed headrail in window casing/molding. Minimum Depth Mount (inches)	 Fully recessed headrail in window casing/molding. Flush with Casing (inches)
Cordless Lift*	1¼" Single Cell	1½ x 3⅞	1⅞	3⅞
	½" Double Cell	1⅞ x 2⅞	⅞	2⅞
	¾" Single Cell	1⅞ x 2⅞	⅞	2⅞
Perfect-View Cordless Lift	1" Pleat	1⅞ x 2⅞	⅞	2⅞
	2" Pleat	1⅞ x 2⅞	⅞	2⅞

*The depth requirements for cordless lift shades also apply to motorized.

Depth Requirements for Inside Mount: Continuous-Loop Lift

Shade Type	Cell Size	Continuous-Loop Lift Headrail Dimensions (inches)	 Partially recessed headrail in window casing/molding. Minimum Depth Mount (inches)	 Fully recessed headrail in window casing/molding. Flush with Casing (inches)
Continuous-Loop Lift	¾" Single Cell ½" Double Cell	1⅞ x 2⅞	⅞	2⅞
	⅞" Single Cell	1⅞ x 2⅞	⅞	2⅞

Depth Requirements for Inside Mount: Slide-View Shades

	Cell Size (inches)	Headrail Dimensions (inches)	 Partially recessed headrail in window casing/molding. Minimum Depth Mount (inches)	 Fully recessed headrail in window casing/molding. Flush with Casing (inches)
Slide-View Shades	1¼ Single Cell	2⅞ x 3⅞	1⅞	3⅞
	½ Double Cell	2⅞ x 3	1⅞	3⅞
	¾ Single Cell	2⅞ x 3	1⅞	3⅞