



Size Considerations

UltraLite Cordless, UltraLite Dual, and Enclosed Loop UltraLite Dual Lift: Mounting Depth Illustrations


The following diagrams illustrate the mounting depth requirements for shades mounted inside window casements.

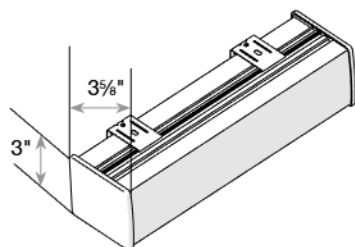


Small Square Cassette Valance
1 5/8" Minimum Inside Mount

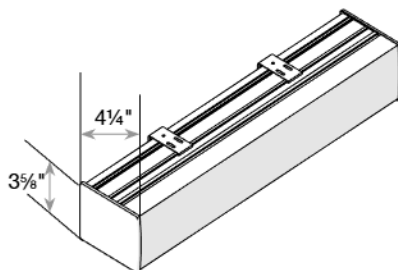


Medium Square Cassette Valance
1 3/4" Minimum Inside Mount

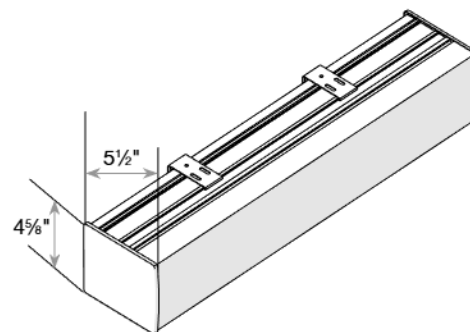


Large Square Cassette Valance
1 3/4" Minimum Inside Mount

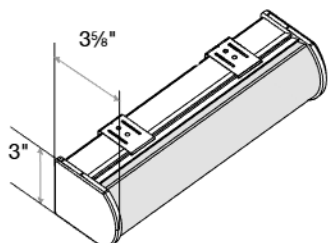


Small Round Cassette Valance
1 5/8" Minimum Inside Mount

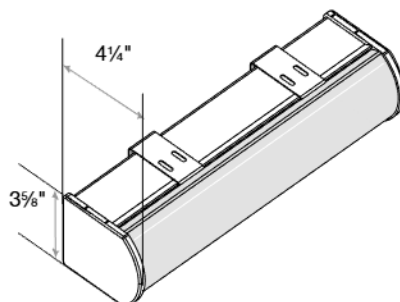


Medium Round Cassette Valance
1 3/4" Minimum Inside Mount

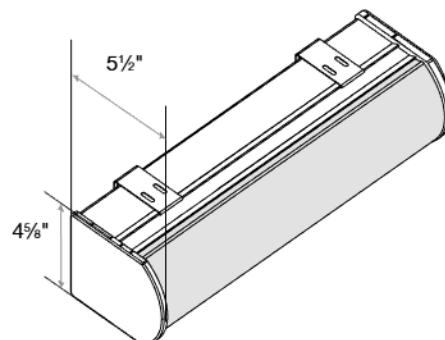


Large Round Cassette Valance
1 3/4" Minimum Inside Mount

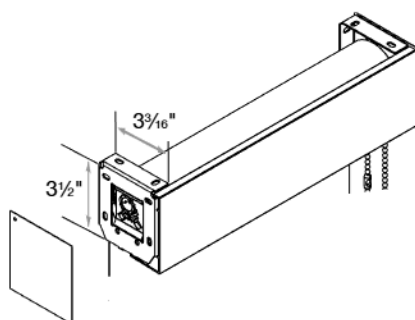


3" Fascia
2 3/4" Minimum Inside/Top Mount
3/4" Minimum Inside/Side Mount

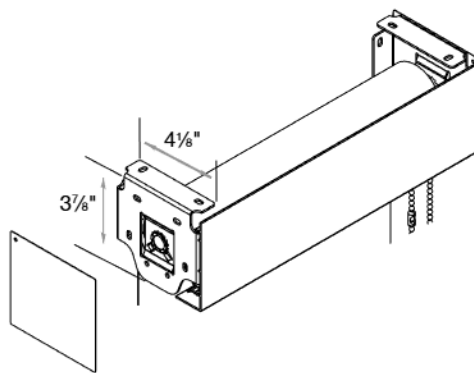


4" Fascia
3 3/4" Minimum Inside/Top Mount
1 1/2" Minimum Inside/Side Mount

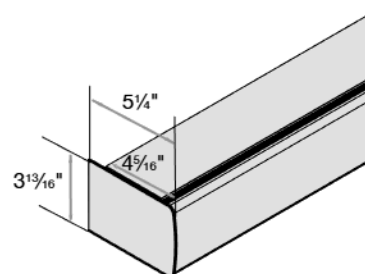


Contour Valance
3 1/2" Minimum Inside Mount
(return can be trimmed)

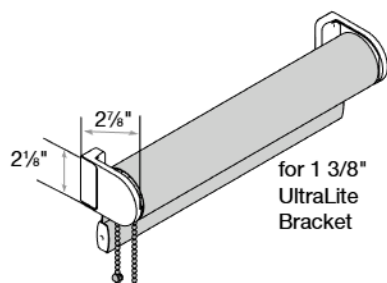

No Valance*
3/4" Minimum Inside/Side Mount

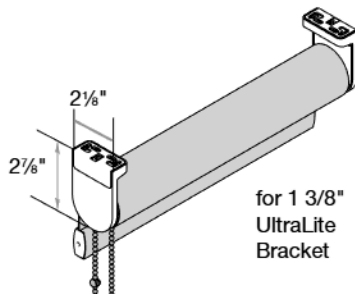

No Valance*
Minimum Inside/Top Mount is
equal to 1/2 the roll diameter, plus 1 1/2"


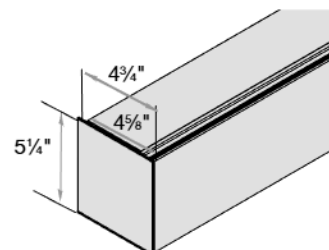


Flat Valance
2 15/16" Minimum Inside Mount
(return can be trimmed)

Size Considerations






UltraLite Cordless, UltraLite Dual, and Enclosed Loop UltraLite Dual Lift: Mounting Depth Illustrations (continued)

The following diagrams illustrate the mounting depth requirements for shades mounted inside window casements.

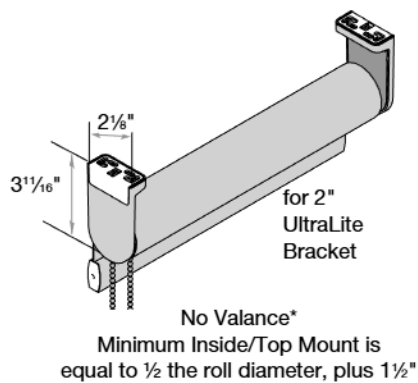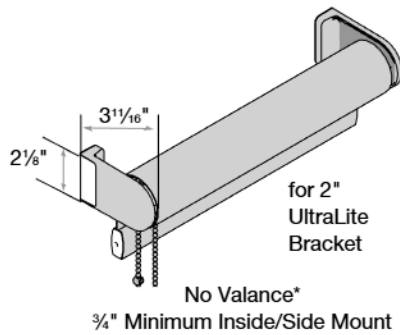

*Largest possible measurement given will vary per fabric and window dimensions.

Cordless & Smart Pull Lift: Mounting Depth Illustrations

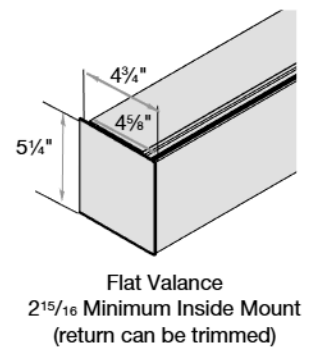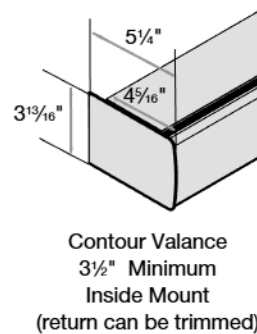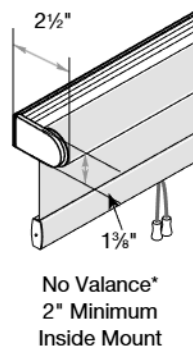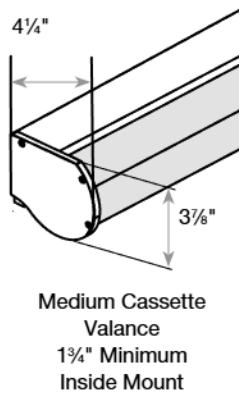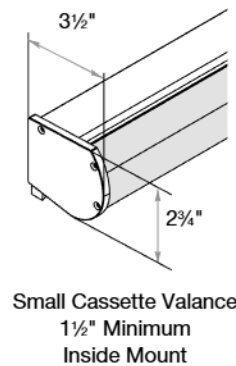


*Largest possible measurement given will vary per fabric and window dimensions.


Size Considerations

Continuous Loop Lift, Enclosed Loop Lift, Motorized Lift, Dual Shade, and Enclosed Loop Dual Shade: Mounting Depth Illustrations


The following diagrams illustrate the mounting depth requirements for shades mounted inside window casements.

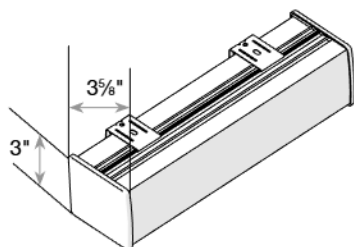


Small Square Cassette Valance
1 3/8" Minimum Inside Mount

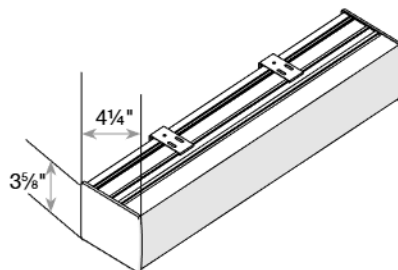


Medium Square Cassette Valance
1 3/4" Minimum Inside Mount

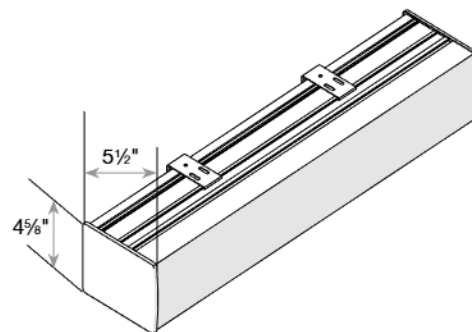


Large Square Cassette Valance
1 3/4" Minimum Inside Mount

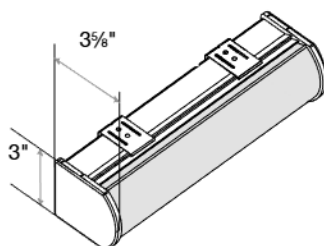


Small Round Cassette Valance
1 3/8" Minimum Inside Mount

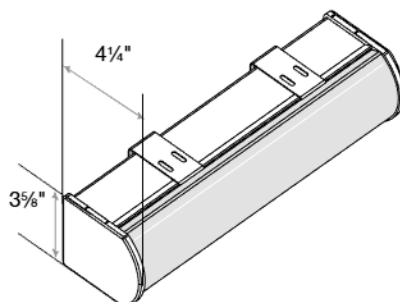


Medium Round Cassette Valance
1 3/4" Minimum Inside Mount

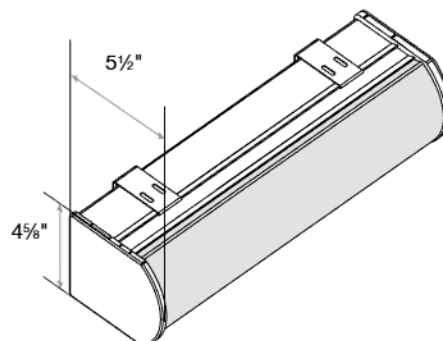


Large/Dual Round Cassette Valance
1 3/4" Minimum Inside Mount

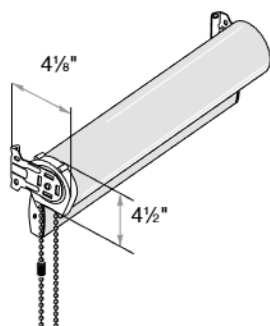


No Valance*
3/4" Minimum Inside/Side Mount

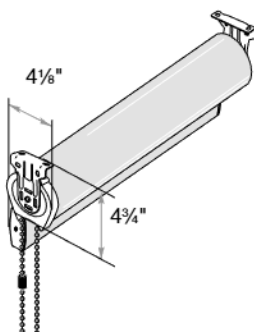


No Valance*
4 1/8" Minimum Inside/Top Mount

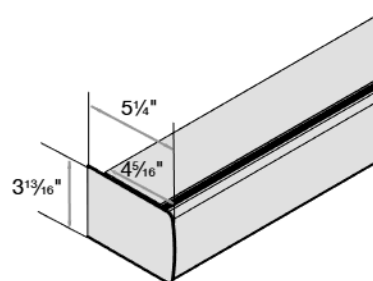


Contour Valance
3 1/2" Minimum Inside Mount
(return can be trimmed)

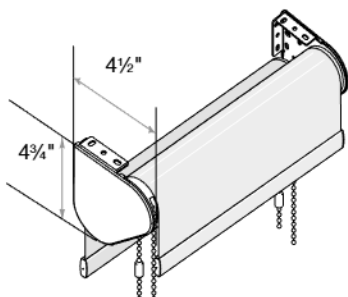


Dual Shade—No Cassette Valance
2" Minimum Inside/Top Mount
3/4" Minimum Inside/Side Mount

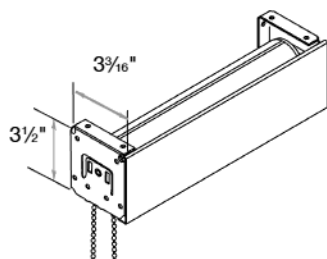

3" Fascia
2 3/4" Minimum Inside/Top Mount
3/4" Minimum Inside/Side Mount

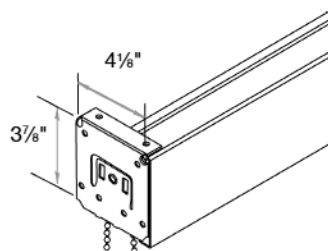

4" Fascia
3 3/4" Minimum Inside/Top Mount
1 1/2" Minimum Inside/Side Mount

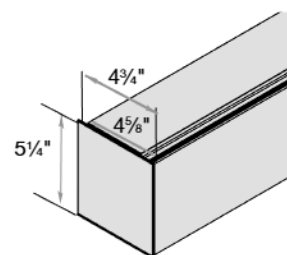

Flat Valance
2 15/16" Minimum Inside Mount
(return can be trimmed)

*Largest possible measurement given will vary per fabric and window dimensions.