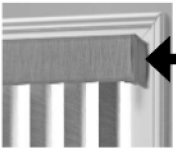
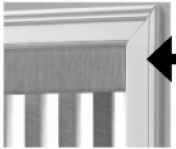
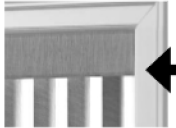


Size Considerations

Depth Requirements for Inside Mount

	Headrail Dimensions (inches)	 Partially recessed headrail in window casing/molding Minimum Depth Mount (inches)	Headrail Flush with Casing (vanes and/or valance not flush with casing) (inches)	Depth Needed for Flush Mount Vane (inches)	 Fully recessed valance in window casing/molding Depth Needed for Flush Mount Vane (inches)
G-71 Super-Vue	1 $\frac{1}{8}$ x 1 $\frac{15}{16}$	2 $\frac{3}{8}$	3	3 $\frac{3}{4}$	4 $\frac{1}{8}$
G-98 Ultra-Vue	1 $\frac{1}{8}$ x 1 $\frac{3}{8}$	2 $\frac{3}{8}$	2 $\frac{11}{16}$	3 $\frac{3}{4}$	4 $\frac{1}{8}$
G-85 Dura-Vue	1 $\frac{3}{16}$ x 1 $\frac{1}{2}$	2 $\frac{3}{8}$	2 $\frac{1}{4}$	3 $\frac{3}{4}$	4 $\frac{1}{8}$

Depth Requirements for Inside Mount

 Partially recessed headrail in window casing/molding Minimum Depth Partially Recessed Mount (inches)	Depth Needed for Flush Mount Headrail (inches)	Depth Needed for Flush Mount Vane (inches)	 Fully recessed valance in window casing/molding Depth Needed for Flush Mount Valance (inches)
2 $\frac{3}{8}$	3	5 $\frac{1}{4}$	6

Partially Recessed: A partially recessed window treatment is where the depth of the window casing is less than the space necessary for a flush mount.

Flush Mount: If the window casing is deep enough to mount the entire blind inside of it, this is called a flush mount.